

Courtenay Sport Ltd, Folgate Road, North Walsham, NR28 0AJ. England.



Locating Bracket. One Each Side. Note bolt orientation.



Horn Location – Turn Out of the way

Courtenay Sport Ltd, Folgate Road, North Walsham, NR28 0AJ. England.



Location on LHS (From Front)



Location Bracket RHS (From Front) Showing pickup point onto radiator.

Courtenay Sport Ltd, Folgate Road, North Walsham, NR28 0AJ. England.




Aircon Valve Clearance – Check



Inlet Side Hose Set Up (LHS From Front)




Cut this small amount (shown top) from the end of the coolant inlet pipe onto the radiator.

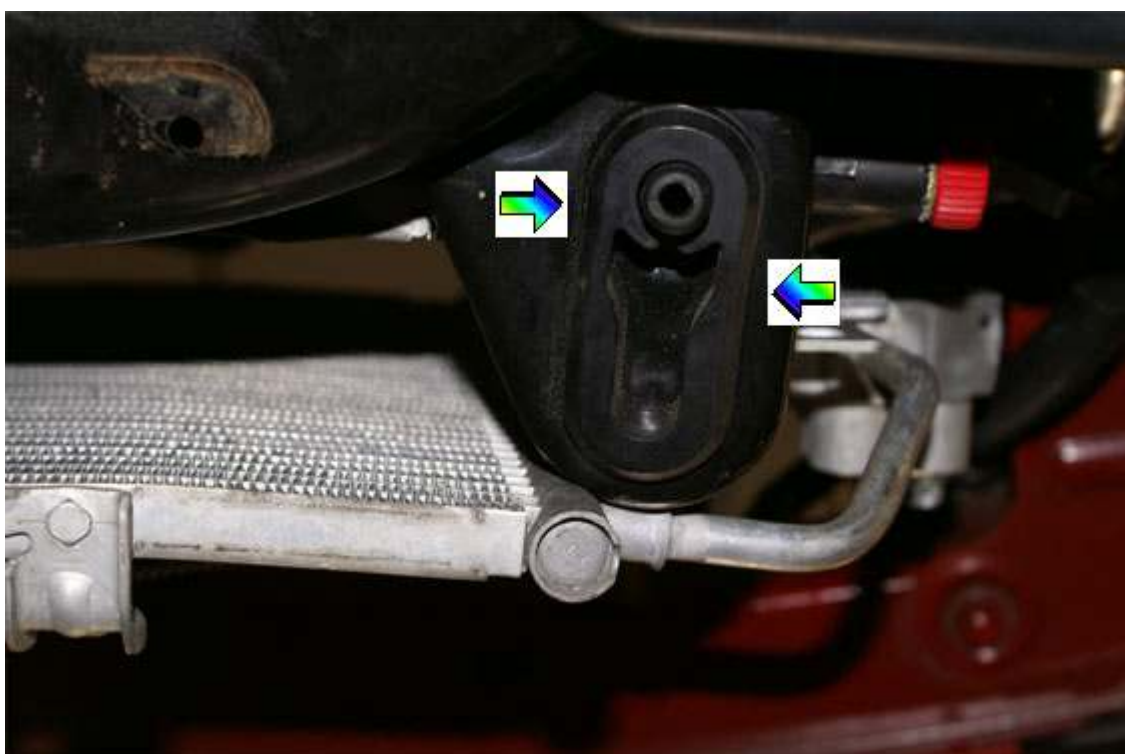

Turn bottom rubber mounts (one shown) round through 180 degrees from original mounting position.



Drill 8mm hole where indicated in picture.

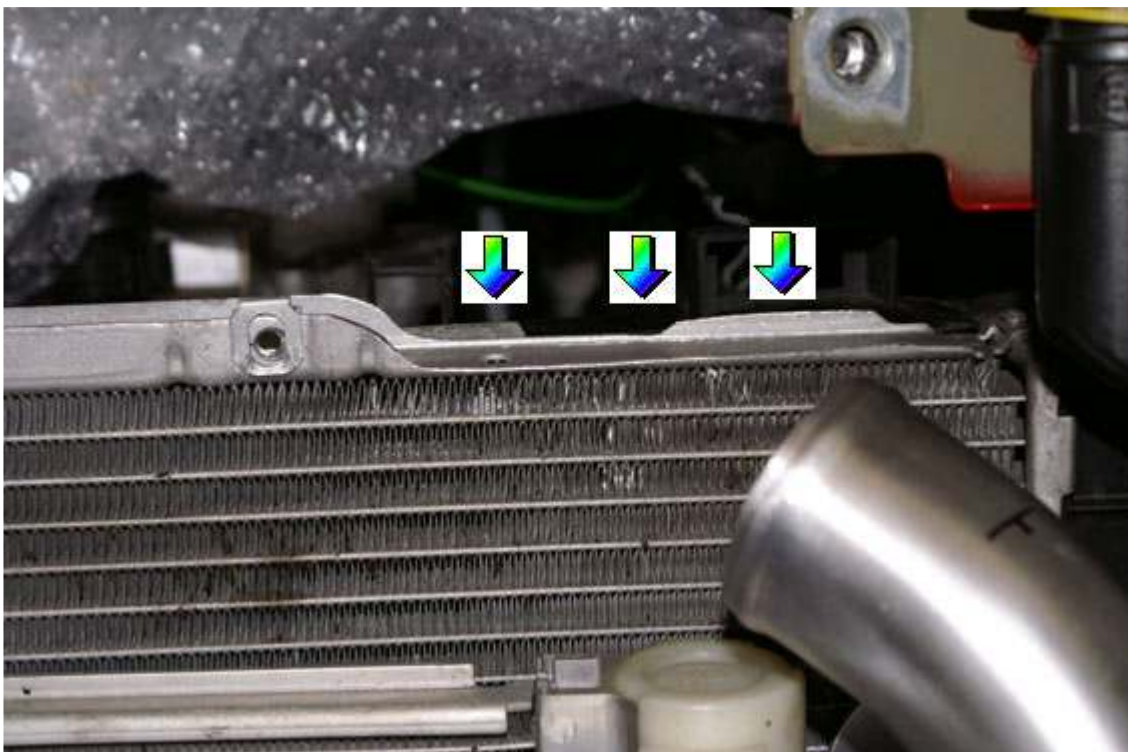

Reshape top of radiator for clearance where indicated.

New Spal Fan: Remove plastic 2 pin connection on supplied fan, noting +ve (Blue) and -ve (Black) wires. Remove OE connections on resistor noting Red +ve and Brown -ve locations. Connect up new fan wires to OE heatsink using solder connections ensuring correct polarity is observed. Blue now goes to where Red was, Black to where Brown was. Mount OE heatsink onto new fan bracket. Mount relays onto fan bracket when in situ.